XPRESS

ODYS

INTERNET TABLET MOVIE PLAYER
eBOOK READER MP3 PLAYER PHOTO VIEWER

ANDROID 2.3

LED BACKLIGHT | CAPACITIVE TOUCH SCREEN | 3G DONGLE READY | YouTube Supports YouTube Video | Supports ADOBE DRM eBOOKS | Wi-Fi | G-SENSOR | HDMI | 2 CAMERAS

Table of Contents

THANK YOU 2
Package Contents 2
Features 3

GETTING TO KNOW THE ODYS XPRESS 4
About the Touchscreen 7
Protective Film 7
Touchscreen Actions 7
About the Orientation Sensor 9
Charging the Tablet 9
Inserting a Memory Card 10

GETTING STARTED 11
Turning the Tablet on and off 11
Turning the Screen On and Off (Standby) 12
Unlocking the Screen 12
Home Screen at a Glance 13
About Applications 14
Preinstalled Applications 15
Installing Applications 16
About Menus 16

CONNECTING TO THE INTERNET 19
Requirements 19
Connect to a wi-fi network 20

BROWSING THE WEB 22

MANAGING APPLICATIONS 25

OPTIONAL CONNECTIONS 26
Connecting to a Computer 26
Connecting to a TV 27
Connecting Headphones 28

SETTING THE SYSTEM OPTIONS 31

SPECIFICATIONS 32

SUPPORT 33

SAFETY NOTICES 34

Thank You

Congratulations on your purchase of an ODYS® XPress Internet Tablet. This guide is provided to help you get started quickly with your player; please read it carefully and save it for future reference.

For detailed instructions, up-to-date information, and helpful tips, please visit the ODYS website at www.odys.de.

The manual is available for download from the ODYS website as a PDF file.
To view PDF documents, download and install the free Adobe Acrobat reader from the Adobe website at www.adobe.com.

Package Contents

Please make sure that the items shown below are included in the package. Should an item be missing, please contact the local retailer from which you purchased this product.

- ODYS® Xpress Internet Tablet
- Protective pouch
- USB cable
- Stereo Earphones
- Power adapter

This package may contain plastic bags or other materials that pose a hazard to children. Be sure to safely dispose of all packing materials after opening.

Features

- Browse the Web.
  Visit your favorite websites
- Check your e-mail
  Keep in touch with friends and family
- Read your favorite books
  Download thousands of books with the included Aldiko E-book reader *
- Discover thousands of apps for Android™
  Download apps from App Center — the marketplace designed for tablets
- Connect to the Internet wirelessly
  High-speed Wi-Fi 802.11 b/g/n networking
- HDMI™ output to your TV **
  Enjoy videos, photos and more in the comfort of your living room
- Enjoy your media library anywhere
  Portable powerhouse plays popular music, video, and photo formats
- microSD memory card reader
  Increase your storage capacity (up to 32 GB supported)
- Built-in camera
  Convenient front-facing camera
- Automatic orientation detection
  Read any way you want; the display adjusts automatically!

* Reading books in the ePub format requires the included Aldiko E-book reader application.

** Requires optional HDMI cable (Type A-to-Type C). 1080p HD video playback requires a video file encoded at 1080p. Streaming video quality will be affected by the source, and the quality and condition of your network connection.

Getting to Know the ODYS Xpress

Unit at a Glance

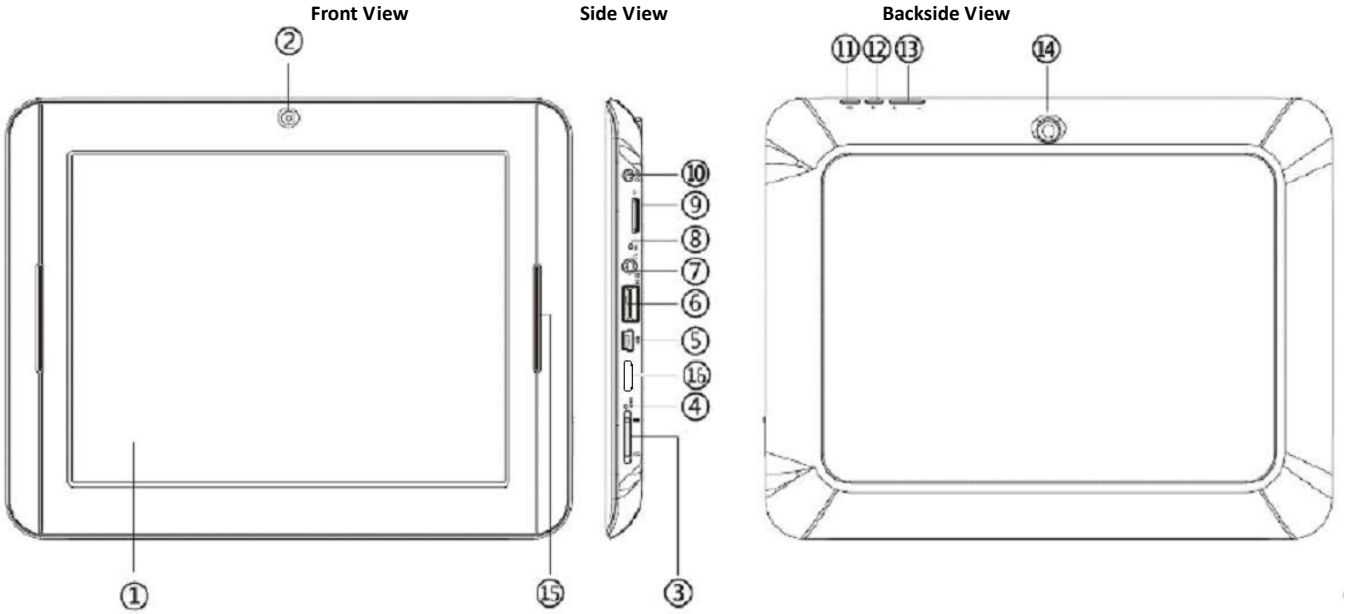

1. **Screen**
2. **Camera** — Front-facing camera for taking avatar pictures
3. **Power Button** — Press and hold the switch left to turn on or off the device;
   Briefly press the switch left to turn the screen on or off.
   Press the switch right to lock the screen in horizontal mode.
4. **Reset pin hole** — Press to reset the tablet if it freezes or otherwise behaves abnormal. (Use a paperclip or other small object to gently press this key.)
5. **USB 2.0 Hi-speed port** — Connect to a computer to transfer data (e.g., music, videos, photos, files).
6. **USB Host** — Support USB stick, Surf stick, KeyBoard and Mouse.
7. **Headphone jack** — Audio output connection for head-phones
   Note: *Speaker output is automatically disabled when headphones are connected to the player.*
8. **Microphone**
9. **Micro SD Card Slot** — Accommodates any standard SD/SDHC memory card.
10. **Power jack (DC input)** — Charge and power the tablet with the included power adapter.
11. **Back soft key** — Tap to return to the previous screen. If the keyboard is on the screen, tap to close the keyboard.
12. **Menu soft Key** — Tap to view the option menu
    Note*: When you Tap the* ***Menu*** *key from within an application, you will see the options for that application. To view the Android system options, tap the* ***Menu*** *key from the home screen.*
13. **Volume +/- key** — Press to increase / decrease the volume level.
14. **Camera (rear)** — Front-facing camera for taking avatar pictures
15. **Speakers** — Stereo speakers.
16. **Mini HDMI** — Connect to a TV or other display.
    Note: *Sound over HDMI must be enabled separately using the system settings.*

About the Touchscreen

Your tablet comes equipped with an easy-to-use touch-screen which allows access to the tablet's functions. Use your finger tip to touch the area of the screen where a control icon is displayed. If you touch and hold the screen, it will register as a continuous button press.

> *To avoid damaging the screen, do not touch it with excessive force or with any object other than your finger (or a stylus). For best response, make sure your hands are clean before using the touchscreen controls.*

Protective Film

A thin film has been applied to the touchscreen to protect it during shipping. The protective film should be removed before use. To remove it, simply take a corner of the film and peel it away from the screen.

Using the Stylus

A stylus is included for your convenience. You can use the tip of the stylus to make precise selections on the touchscreen.

Touchscreen Actions

You can control the functions of the tablet by using the touchscreen in combination with the three touch keys located on the bezel. To control the tablet with the touchscreen, use your fingertip or stylus to manipulate icons, buttons, menu items, the on-screen keyboard, and other items displayed on the screen.

You can perform the following actions on the touchscreen using your fingertip or stylus.

Touch:	To activate an on-screen item (e.g., application icons, buttons, menu items, and the letter/symbols of the on-screen keyboard), simply touch them with your fingertip or stylus.
Touch and Hold:	Some on-screen items have an alternate action if you touch and hold it (e.g., opening an alternate menu, or to activate the drag function). To touch and hold an item, touch the item and do not lift your fingertip/stylus until the action occurs.
Drag:	Drag an on-screen item to change its position (e.g., an application icon on the home screen). To drag an item, touch and hold it for a moment, then without lifting your fingertip/stylus, move your fingertip/stylus on the screen until the item reaches its target destination.
Swipe:	Swipe up/down on the screen to scroll through a list. On some screens, you may be able to swipe left/right to change the view. To swipe, touch the screen and then quickly move your fingertip/stylus across the screen without lifting your fingertip/stylus. Do not pause on the screen with your fingertip/stylus at the initial point of contact or you may accidentally drag an item instead.
Double-tap:	Quickly tap the screen twice on a webpage or other application screen to zoom (the application must support the double-tap/zoom function). Within the browser, double-tapping a webpage section will cause the browser to zoom and fit that section to the width of the screen.

About the Orientation Sensor

The tablet contains a sensor that will automatically change the orientation of most screens as you rotate the tablet. The sensor works best when the tablet is rotated perpendicular to the ground (i.e., when the tablet is held upright and not fat on its back).

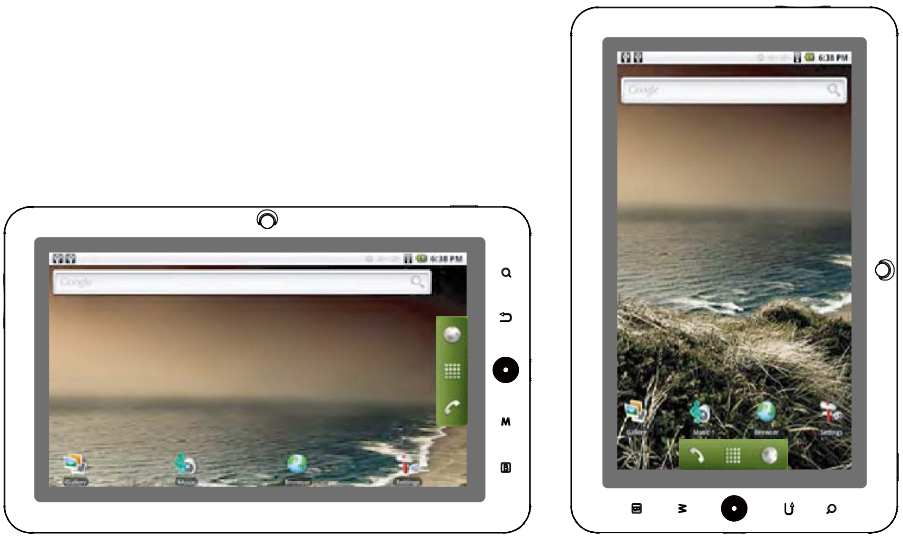

The orientation sensor can be turned on and off using the on/off key.

Charging the Tablet

The tablet comes with a built-in rechargeable lithium-polymer battery.

Before using the tablet, the battery should be charged fully. The Status Indicator will light green when the battery is charged fully.

To charge the battery:

1. Plug one end of the included power adapter into an AC 100-240V outlet.
2. Plug the other end of the included power adapter into the Power jack on the tablet.
3. Disconnect the power adapter when the tablet is fully charged.

> *The battery used in this device may present a fire or chemical burn if mistreated. Do not disassemble, incinerate, or heat the device. Do not leave the device in a place subject to direct sunlight, or in a car with its windows closed. Do not connect the device to a power source other than that which is indicated here or on the label as this may result in the risk of fire or electric shock.*

Inserting a Memory Card

The tablet accepts microSD memory cards. Insert a memory card into the microSD card slot to:

- Increase the memory capacity of your tablet
- Play media files stored on the memory card (e.g., music, video, or photo files).

To insert a memory card:

1. Align the memory card with the card slot. The metal contacts of the memory card should face down away from the LCD screen.
2. Slide the card into the spring-loaded slot. Push the card in until it clicks into place.

   Do not attempt to insert objects other than a microSD memory card into the card slot. A compatible memory card should fit easily into the card slot; if you encounter resistance, check the alignment of the card. Do not attempt to force the card in.

   Avoid touching the gold contacts of the memory card.

To release and remove a memory card:

1. UNMOUNT the memory card.

a. From the home screen, tap the **Menu** key, and then touch Settings to show the settings menu.

b. Touch **SD card & Device storage** to show the SD card & device storage settings.

c. Touch **Unmount SD card** to prepare the memory card for safe removal.

2. Push the card further into the slot until you hear a click. The card will spring out of the slot.

3. Grasp the card by its edge to remove it.

   To avoid damage and data corruption, do not remove a memory card while data is being written to or read from the card. For example, do not remove a card while playing a music file stored on the card.

Getting Started

Turning the Tablet on and off

To turn the tablet on:

- Press and hold the **Power** key until the LCD screen turns on. Wait until the Home screen appears; the tablet is now ready for use.

To turn the tablet off:

1. Press and hold the **Power** key until a confirmation message will appears.

2. Touch **OK** to turn off the tablet.

Turning the Screen On and Off (Standby)

When the tablet is on, you can turn off the screen to conserve battery power. Simply press the **Power** key once to turn the screen off. Press the **Power** key again to turn the screen back on.

> *To conserve battery power, the screen can be set to turn off automatically when the tablet is not in use (between 15 seconds and 30 minutes). This* **Screen timeout** *option can be found in the* **Display settings** *menu.*

Unlocking the Screen

When the screen turns off, you will have to unlock the screen when you turn it back on.

To unlock the screen, drag the **lock** icon across the screen towards the speaker icon.

If a password has been set, enter the password to finish unlocking the screen. The Screen Unlock password can be set in the **Location and security** settings menu.

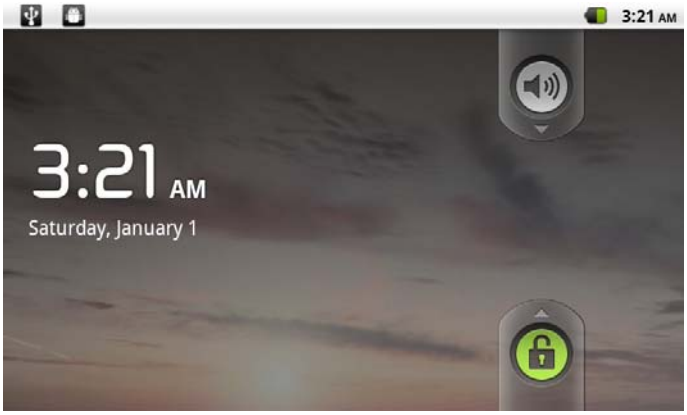

Home Screen at a Glance

The home screen is the starting point for all of the features of your tablet.

a. Home soft key	Tap to return to the home screen. Tap and hold to view a list of recently used applications; touch an application in the list to launch it.
b. System Hints	Informs the user if attached memory or updates are available and other system status information's
c. Wifi	Appears when a wireless connection was established
d. Battery Charge	
e. Current Time	
f. Volume Control	Press to decrease/increase the volume level.
g. Back soft key	Tap to return to the previous screen. If the keyboard is on the screen, tap to close the keyboard.
h. Menu soft Key	Tap to view the option menu *Note: When you Tap the Menu key from within an application, you will see the options for that application. To view the Android system options, tap the Menu key from the home screen.*
i. Google Search Bar	
j. Music	Music playback
k. Video	Video playback
l. Aldiko	To read and manage e-books in ePub or PDf format
m. Galerie	Picture view
n. Browser	Tap to launch the Browser to visit your favorite websites.
o. E-Mail	To open the mail client
p. Applications icon	Tap on this icon to reveal all applications installed on your Tablet - You can copy the applications onto the Home screen by pressing and holding on their icons. - You can delete the application from the Home Screen by dragging their icons to the Application Tab. To delete a Home screen item, hold your finger onto it until it is highlighted, then drag it to the Application Tab which has become a trash icon.

About Applications

To open an application, touch the application icon on the home screen or in the Launcher.

Preinstalled Applications

Some applications have been installed on your tablet for your convenience. These applications include:

File explorer

View photos and watch videos

This Manual

Music playback

Voice recording

Camera

Manage installed applications.

App Store

E-Mail programm

Calendar setting

Browser

Alarm clock

System settings

Calculator

Manage running applications.

e-Book Reader for ePub and PDF e-Books.

Installing Applications

You can also download an install additional applications from App Center, the web browser, or other sources.

The tablet must be set to allow installation of applications from non-Market sources. The Unknown sources option can be set in the **Application settings** menu.

> *Support for third-party applications is provided by their respective applications developers. ODYS is not responsible for the behavior of these applications; please review the description and terms of use provided by third-party developers carefully before installing applications on your tablet.*

About Menus

There are two types of menus used by the tablet.

1. Option menus.

Option menus contain items related to the current screen or application. To view an option menu, press the **Menu** key.

Not all screens or applications have an option menu; if a menu does not exist, nothing will happen if you press the **Menu** *key.*

2. Context menus.

Context menus contain items related to a specific item on the screen. To view a context menu, touch and hold an item on the screen.

Touch & hold **Video(3)**.

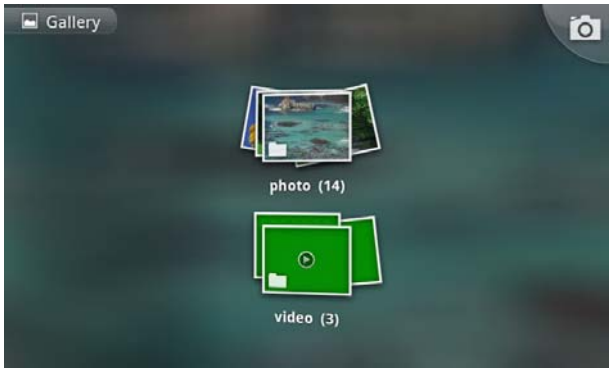

A context menu will appear.

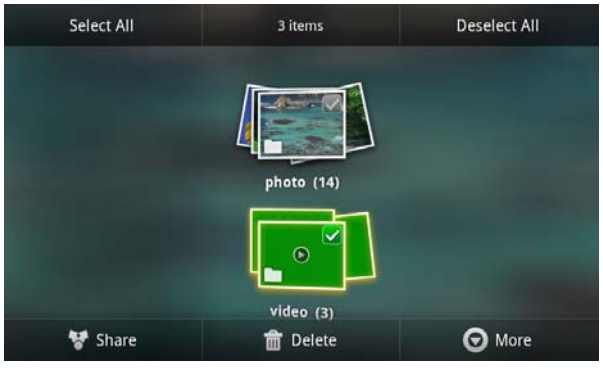

Not all items have a context menu; if a menu does not exist, nothing will happen if you touch and hold the item.

About Notifications

The icons that appear in the Notification bar at the top of the screen alerts you when new messages arrive or alarms or other application events occur.

View and respond to the notifications by opening the full Notifications panel.

Drag the **Notification** bar down to the bottom of the screen to open the Notifications panel from any screen, or;

On the Home screen, press the **Menu** key and then touch **Notifications** to open the Notifications panel.

1. To respond to a notification:

Touch a notification in the list; the Notifications panel will close and the application associated with the notification will launch.

2. To clear all notifications:

Touch the Clear button at the top right of the Notifications panel; the panel will close and all notifications will be cleared.

3. To close the Notifications panel:

- Drag the handle at the bottom of the Notifications panel to the top of the screen, or;
- Press the **Back** key.

Connecting to the Internet

This tablet can utilize Wi-Fi data networks to connect to the Internet. Wireless Wi-Fi technology can provide Internet access at distances of over 300 feet; however, this distance can be affected by your surrounding environment and Wi-Fi router.

Requirements

In order to connect to the Internet, you will need the following:

1. A wireless router or access point with a broadband Internet connection

The wireless router must support Wi-Fi 802.11b/g/n connections. If the router supports 802.11n, make sure that it has been configured to accept 802.11b/g/n connections as well.

A minimum connection speed of 64 Kbps is recommended. Faster speeds will enable a better Internet experience.

2. The wireless router network settings

You will need to know the name of your network (SSID), as well as the password or other credentials if your network is secured. These settings can usually be found on the administration webpage of your wireless router.

Please refer to your wireless router's documentation for help, or ask your network administrator for details.

You may encounter open Wi-Fi networks, or "hot spots." These networks are usually configured so that you can simply connect to them without needing to know its settings; the tablet will obtain all the information it needs from the router automatically.

Connect to a Wi-Fi network

The Notification bar displays icons that indicate your tablet's Wi-Fi status.

	Notification that an open Wi-Fi network is in range.
	Connected to a Wi-Fi network (waves indicate connection strength).
[no icon]	There are no Wi-Fi networks in range, or the Wi-Fi radio is off.

1. Turn on the Wi-Fi radio if it is not already on. To turn on Wi-Fi:

a. Go to the Home screen:

Press the **Home** key.

b. Open the Settings menu:

Tap the **Menu** key, then touch **Settings**.

c. Open the Wireless & networks menu:

Touch **Wireless & networks**.

d. Open the Wi-Fi settings menu:

Touch **Wi-Fi settings**.

e. Make sure that the Wi-Fi option box is checked: Touch **Wi-Fi**.

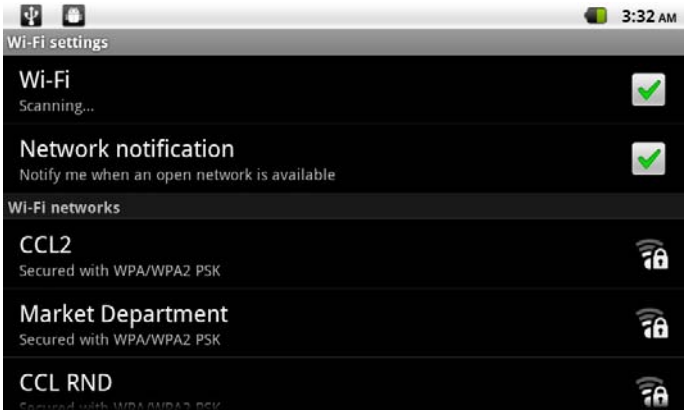

When Wi-Fi is on, the tablet will look for and display a list of available Wi-Fi networks.

> *If a network that you have connected to previously is found, the tablet will connect to it.*
>
> *If you don't see your network in the list, you can force the tablet to re-scan. To scan for networks, tap the* **Menu** *key, and then touch* **Scan***.*

2. Select an available Wi-Fi network to connect to:

In the same Wi-Fi settings menu above, touch a network in the list.

If the network is open, the tablet will prompt you to confirm connection to the network. Touch **Connect** to confirm.

If the network is secured (as indicated by a Lock icon), the tablet will prompt you to enter a password or other credentials. Touch the Wireless password box to show the on-screen keyboard and then use it to enter the password. Touch **Connect** to confirm.

When you have successfully connected to a Wi-Fi network, the Notifications bar at the top of the screen will show a Wi-Fi signal indicator.

> *To learn about how to add a Wi-Fi network when it is not in range or when the router is set to obscure the network name (SSID); or to configure advanced Wi-Fi options, please refer to the manual.*

Browsing the web

The Browser application lets you visit webpages and find information on the web. Keep up with the news, your friends, or enjoy video from YouTube™, the world's most popular video-sharing community.

To use Browser, the tablet must be connected to the Internet. Read the section "Connecting to the Internet" to learn how to connect to the Internet.

To open Browser, touch the Browser icon on the Home screen or in the Launcher.

	Name	Description
1	Address bar	Displays the address (URL) of the current page. Touch the bar to enter a new address or to search the web.
2	Bookmark icon	Touch the **Bookmark** icon to add or view bookmarks, to view your most visited sites, or to view your browser history.

Some common Browser actions are described below.

- **To go to a webpage.**

1. Touch the **Address bar** at the top of the Browser screen. The keyboard will open automatically. (If the Address bar is not visible, drag the page down to return to the top of the Browser screen.)	
2. Use the keyboard to enter the ad-dress (URL) of the webpage (e.g., m.youtube.com.	
3. Touch **Go** to open the webpage.	

◆ **To bookmark a webpage**.

Bookmark your favorite webpages in order to visit them quickly without entering a URL.

1. Go to the webpage that you want to bookmark	
2. Touch the **Bookmark** icon to the right of the Ad-dress bar.	
3. Touch the **Add** tile.	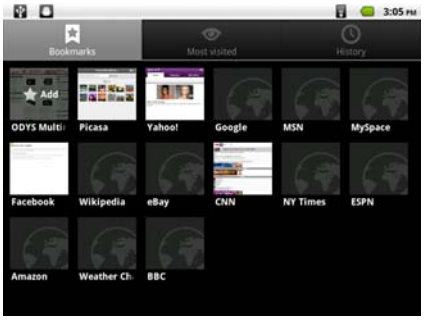
4. If desired, you can modify the name of the bookmark or its location (URL address). Otherwise, touch **OK** to finish adding the book-mark.	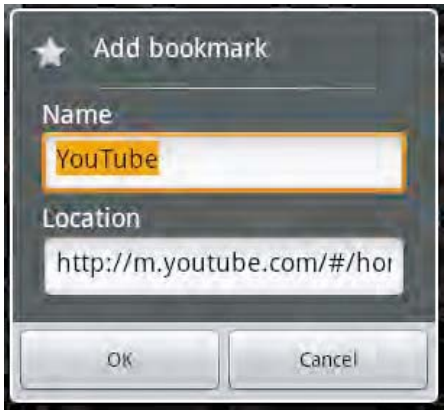

◆ **To go to a bookmarked webpage.**

1. Touch the **Bookmark** icon to the right of the Address bar.	

2. Touch a bookmark tile to open it.	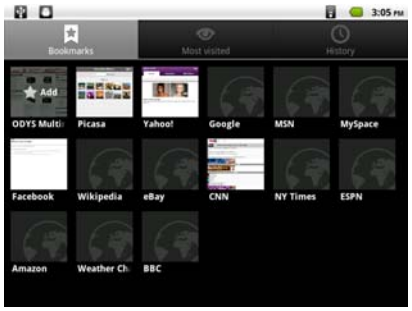

◆ **To open a new browser window.**

1. Press the **Menu** key to show the Browser options.	
2. Touch **New Window** to open a new browser window.	

◆ **To switch between browser windows.**

1. Press the **Menu** key to show the Browser options.	
2. Touch **Windows** to show a list of open browser windows.	
3. Touch the name of a window to switch to it, or touch the “x” to close the window.	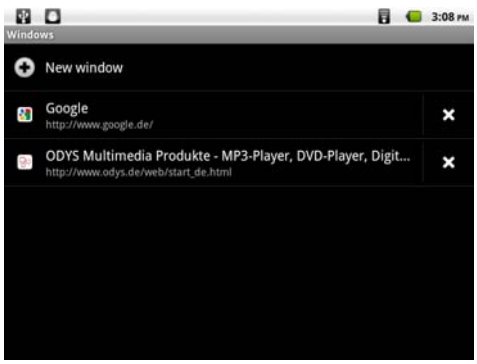

Managing Applications

Downloading and installing new applications to your tablet can extend its functionality in many ways.

You can download and install applications from the included App Center. To open the App Center:

1. Touch the **Launcher** icon.
2. Touch the **App Center** icon.

When installing an application, it will tell you what functions of the MID it needs to control and if it needs access to your data. Make sure you review these access requirements carefully before completing the installation.

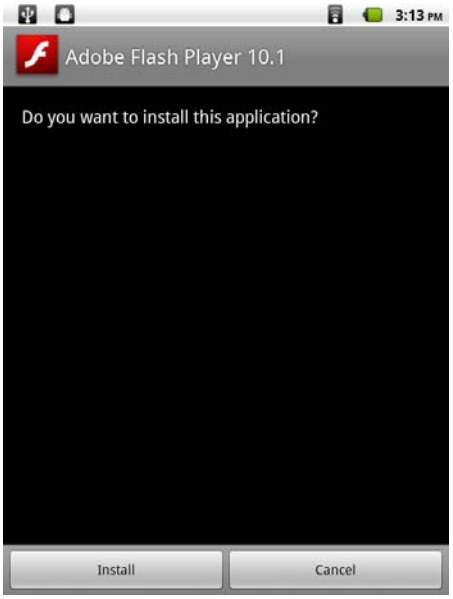

Be especially cautious with applications that request access to many functions or to a significant amount of your data. You are responsible for the results of applications installed on your tablet.

- You can learn more about App Center, and browse applications by visiting their website at http://www.androidpit.de/de/android/market/app-center.

  Some developers allow you to download and install applications directly from their website.

  Support for third-party applications is provided by the respective application developer. ODYS is not responsible for the behavior of these applications; please review the description and terms of use provided by third-party developers carefully before installing applications on your tablet.

To uninstall an application:

1. From the Home screen, tap the **Menu** key.
2. Touch Settings to open the **Settings** menu.
3. Touch **Applications**, and then touch **Manage applications** to show a list of all applications installed on the tablet.

4. Touch the name of the application you want to uninstall; the Application Info screen will open.

5. Touch **Uninstall**. The tablet will prompt you to confirm.

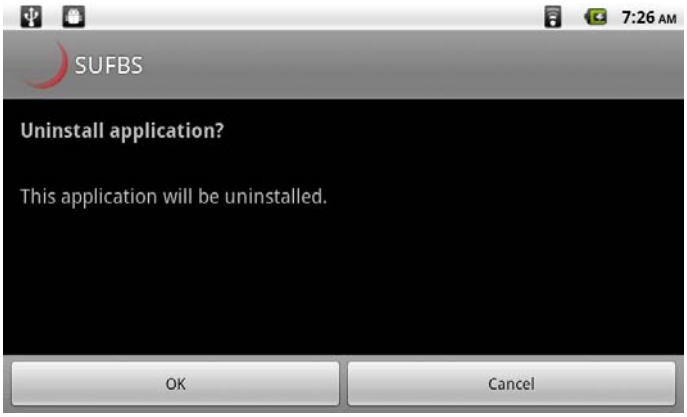

6. Touch **OK** to uninstall the application.

Optional Connections

Connecting to a Computer

Connect the tablet to a computer to transfer files.

1. Connect your tablet to the computer.

With the included USB cable:

- Plug the small end of the cable into the USB 2.0 Hi- speed connector of the tablet.
- Plug the large end of the cable into an available USB 2.0 Hi-speed port on the computer.

2. When your tablet is connected, a USB icon will appear in the Notification bar.

Drag the Notification bar down to open the notifications panel.

3. Mount the storage drive.

- Touch USB connected (Internal) to mount the tablet's built-in storage, then touch Mount when prompted to confirm. When mounted, you can copy files to/from your computer to it.
- If a memory card is installed, touch USB connected (External) to mount the card, then touch Mount when prompted to confirm. When mounted, you can copy files to/from the computer to it.

Your tablet will be recognized by the computer as a Removable Storage drive. Drag and drop files between your tablet and the computer. To learn more about copying files, please refer to the documentation included with your computer or operating system.

Connecting to a TV

Connect to a TV to enjoy your tablet from the comfort of your living room. An HDMI cable (Type A-to-Type C) is required to connect the tablet to a TV.

Before connecting the tablet to the TV, you will have to adjust a few display settings on the tablet.

- Make sure that the tablet is set to output over HDMI
- For optimal visual performance, make sure that the video output resolution of your tablet matches the capabilities of the TV.

To adjust the display settings:

1. From the home screen, press the **Menu** key, and then touch Settings to show the settings menu.
2. Touch **HDMI Setting** to show the Display settings.
3. Touch **HDMI Resolution**, and then touch a resolution option that matches the display capabilities of the TV:
   - ✧ Choose **1080P** if your TV is capable of displaying 1080p video.
   - ✧ Choose **720P** if your TV is capable of displaying 720p or 1080i video.

To connect the tablet to the TV:

1. Plug the small end of the HDMI cable into the mini HDMI connector of the tablet.
2. Plug the large end of the HDMI cable into the HDMI port on the TV.
3. Turn on the TV, and set its display mode to the HDMI port that the tablet is connected to.

The tablet's display will be output to the TV screen.

> *If you need help setting the display mode of the TV, please refer to the documentation provided by the TV manufacturer.*
>
> *If there is no sound from the tablet on your TV, you may need to set the* **HDMI switch** *sound settings.*
>
> *It is recommended to use a USB Computer Mouse to control the tablet.*

Connecting Headphones

Connect a pair of headphones (or earphones) to the tablet to enjoy media in private.

Lower the volume level of the tablet before connecting headphones, and then slowly raise the volume to a comfortable listening level.

- ◆ The headphones must have a 3.5 mm (1/8 in) plug.
- ◆ When headphones are connected, speaker output will be disabled automatically.

> *Hearing experts advise against the constant use of personal stereos played at high volume. Constant exposure to high volumes can lead to hearing loss. If you should experience ringing in the ears or hearing loss, discontinue use and seek medical advice.*

Connecting a Keyboard

For times when you want to type for an extended period of time, you may want to connect a full-size keyboard to the tablet.

> *You may also use this connection to add a mouse to the tablet.*

Connecting a UMTS Dongle (3G dongle)

This function is optional and requires accessories which are not included. Use the included USB full-size (Type A) adapter to connect a 3G UMTS dongle to the tablet (a compatible 3G UMTS dongle is required for proper use. At present, only Huawei E1750,E220 and E156G dongles are supported and may be purchased in the Web-Shop www.odys.de. We cannot guarantee the proper function of dongles, other than that specified here. Using other dongles are at users own risk).

For proper internet connection, a SIM card with appropriate mobile internet subscription contract is required.

ATTENTION:

Should the SIM card protection via Pin code be activated, deactivate this protection before attempting use with this device. The SIM card PIN may be deactivated using most conventional cell phones. Please refer to the cell phone user manual for information on deativating the PIN.

UMTS dongles (see notice) may be connected to this device using the USB-Adapter included and should be configured as follows:

1 Connect the dongle to the device using the USB-Adapter.
2. Turn the device on.
3. Go to installed applicatons page and select “Settings” – “Wireless & Network” – “Mobile networks”
4. Select the first menu item to add a new internet connection.
5. Enter the mobile internet connection data in the spaces provided. If necessary, contact your mobile internet provider for the essential connection data.
6. Press menu button and select **Save** to save the settings.

Connecting a Storage Device

This connection supports a maximum storage size of 4 GB. For additional storage capacity, a microSD card can be added to the tablet.

Setting the System options

Open the system settings menu to adjust how the tablet looks and functions.

Many applications will have their own settings; refer to the documentation provided by the application developer to learn more.

To open the Settings menu:

1. From the Home screen, press the **Menu** key.
2. Touch **Settings** to open the Settings menu.

The settings are grouped by category. Touch a category to open and adjust its settings.

Please refer to the manual for a description of the items in the Settings menu.

Specifications

Please visit www.odys.de for the latest product information. Design, specifications, and manual are subject to change without notice.

Processor	Cortex A8 (1,2 GHz)
RAM	512 MB DDR3
Storage	4GB flash built-in microSD card slot (max. 32GB supported)
Display	8.0" TFT LED (800 x 600), capacitive touchscreen
Wi-Fi Networking	IEEE 802.11 b/g/n
Video Output	Mini HDMI, type C (1080p and 720p supported)
Audio Output	3.5 mm headphone
PC Interface	USB 2.0 Hi-speed
Additional Features	Front-facing camera (0.3 MP) /back (2.0 MP) Built-in microphone Stereo speakers
Operating System	Android™ 2.3
Power	Rechargeable Li-poly battery Power Adapter (DC 9V, 2A)
Playback Time (hours) *	Up to 25 hours music, 5 hours video, 6 hours web browsing

* *Music was tested with a 128 kbps MP3 file; video was tested with a 1920 x 1080 MPEG-4/AVC file; browsing was tested with the screen brightness set to default. Actual playback results may vary.*

Support

If you have a problem with this device and want to get information about GPL and source code, please check our website at www.odys.de for Frequently Asked Questions (FAQ) and product updates. If these resources do not resolve the problem, please contact Technical Support.

ODYS Electronics Technical Support

Email: support@odys.de

Web: www.odys.de

Phone: +49 (0)2154-8826-101

Monday to Friday, 9:00AM–5:00PM

Safety Notices

Important Safety Instructions

1. Read Instructions: All the safety and operating instructions should be read before the product is operated.
2. Retain Instructions: The safety and operating instructions should be retained for future reference.
3. Heed Warnings: All warnings on the product and in the operating instructions should be adhered to.
4. Follow Instructions: All operating and usage instructions should be followed.
5. Cleaning: Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. Attachments: Use only attachments recommended by the manufacturer. Use of other attachments may be hazardous.
7. Water and Moisture: Do not use this product near water (e.g., near a bath tub, washbowl, kitchen sink, laundry tub, in wet basements, or near a swimming pool and the like).
8. Ventilation: Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer instructions have been adhered to.
9. Power Sources: This product should be operated only from the type of power source indicated on the rating label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power or other sources, refer to the operating instructions.
10. Overloading: Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
11. Object and Liquid Entry: Never push objects of any kind into this product through openings as they may touch dangerous voltage points or shout-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
12. Servicing: Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
13. Damage Requiring Service: Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a) when the power-supply or plug is damaged; b) if liquid has been spilled or if objects have fallen into the product; c) if the product has been exposed to rain or water; d) if the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation; e) if the product has been dropped or damaged in any way; f) when the product exhibits a distinct change in performance—this indicates a need for service.
14. Replacement Parts: When replacement parts are required, be sure that your service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
15. Safety Check: Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to ensure that the product is in proper operating condition.
16. Heat: The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

Tips regarding environmental protection

At the end of its operating life, this product may not be disposed of by way of your normal household waste. Instead it must be delivered to a collection point for recycling electrical and electronic equipment. The icon on the product, in the operating instructions or on the packaging, indicates this.

The materials used in manufacturing this product are recyclable, depending on their identifying markings. By recycling this equipment, by recycling its components, or through other procedures of re-using outdated equipment, you are making an important contribution to protection our environment. Please ask you local municipal administration for the location of the corresponding recycling point.

Battery Recycling

In order to ensure the environmently friendly disposal of batteries, please do **NOT** dispose of used batteries through normal household waste. Please take the batteries to your local retail or community collection point for recycling.
The following may be an indication of a discharged battery: The device cannot be switched on. The device switches off automatically and "Battery Empty" is shown in the display. The device and or battery do not function properly.

Hearing Safety

Listen at a moderate volume: Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss. Sound can be deceiving. over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there. To establish a safe volume level: Set your volume control at a low setting. Slowly increase the sound until you can hear it comfortably and clearly, without distortion. Listen for reasonable periods of time: prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss. Be sure to use your equipment reasonably and take appropriate breaks. Be sure to observe the following guidelines when using your headphones. Listen at reasonable volumes for reasonable periods of time. Be careful not to adjust the volume as your hearing adapts. Do not turn up the volume so high that you can't hear what's around you. You should use caution or temporarily discontinue use in potentially hazardous situations. Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.

Legal and Trademark Notices

ODYS and Xpress are trademarks of ODYS Electronics Corporation.

Android is a trademark of Google Inc. Use of this trademark is subject to Google Permissions.

Portions of the artwork used for this package are modifications based on work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License.

HDMI, the HDMI Logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

microSD is a registered trademark of the SD Card Association.

USB is a registered trademark of USB Implementers Forum, Inc.

YouTube™ is a trademark of Google, Inc.

All other trademarks and logos are property of their respective owners unless indicated otherwise.

Warranty condition

The following conditions comprise the requirements and scope of our warranty conditions and do not affect our legal and contractual warranty obligations.

We offer a warranty on our products in accordance with the following conditions:

1. Odys products are covered by a 24 month warranty. We will resolve damages or defects on Odys products free of charge within 12 months of the purchase date under the following warranty conditions. For any damage or defect determined later than 12 months after the purchase date, proof of a manufacturing fault must be submitted for repair under warranty.
   The warranty does not cover batteries and other parts, which are considered consumables, parts that break easily such as glass or plastic or defects based on normal wear and tear. There is no warranty obligation in the event of marginal differences compared to the target appearance and workmanship provided these have a negligible effect on the product's fitness for use, in the event of damage caused by chemical or electrochemical effects, by water or generally from abnormal conditions.
2. The warranty will be performed in such a way that we shall decide whether to repair the defective parts or to replace them with working parts free of charge. AXDIA reserves the right to exchange the product for a replacement product of equal value if the product that is sent in cannot be repaired within a reasonable time or at reasonable cost. The product can also be exchanged for a different model of the same value. Requests cannot be made for repairs to be carried out on site. Parts that have been replaced or exchanged become our property.
3. The warranty claim does not apply if repairs or other work is carried out by unauthorized persons or if our products are equipped with additional parts or accessories that are not approved for our products.
4. Warranties that have been activated do not cause the warranty period to be extended, nor do they trigger a new warranty period. The warranty period for any replacement parts installed ends with the warranty period for the entire product.
5. Any other or further claims are excluded, especially those for replacement due to damage caused outside of the product, provided there is no obligatory legal liability. We therefore accept no liability for accidental, indirect or other consequential damage of any kind, which leads to usage restrictions, data loss, loss of earnings or interruption to business.

Asserting a warranty claim

1. To make use of the warranty service, you must contact the AXDIA Service Center by e-mail, fax or phone (see below for contact details). You can also use the service form on our website or on the back of the warranty conditions.
2. AXDIA Service Center will try to diagnose and solve your problem. If it is determined that a warranty claim exists, you will be given an RMA number (Return Material Authorization) and you will be asked to send the product to AXDIA.

IMPORTANT: AXDIA will only accept parcels that have an RMA number.

Please observe the following when sending the product:

1. Send the product suitably packaged with carriage and insurance paid. Do not enclose any accessories with the products (no cables, CD's, memory cards, manuals, etc.), unless the AXDIA Service Centre specifies otherwise.
2. Mark the RMA number on the outside of the package in such a way that it is visible and clearly legible.
3. You must enclose a copy of the sales slip as proof of purchase.
4. Once AXDIA has received the product, it will meet its warranty obligations in accordance with the warranty conditions and will return the product to the sender with carriage and insurance paid.

Service outside of warranty

AXDIA can refuse any service claim made that is not covered by the warranty. If AXDIA agrees to provide a service outside the warranty, the customer will be invoiced for all repair and transport costs.
AXDIA will not accept any packages that have not first been approved by AXDIA by means of an RMA (Return Material Authorization).